



2020 RIO



VEHICLE FEATURE TIPS

Many of the Tips presented below are covered in greater detail in the Owner's Manual, Multimedia System Manuals, Features and Functions Guide, and Quick-Start Guide hangtag supplied with your new vehicle.

VOICE RECOGNITION¹ AND BLUETOOTH²

Using Voice Recognition

Improve Bluetooth® Voice Recognition (VR) performance by making a few simple changes to your phone contacts:

- Use full names (first and last names) vs. short or single-syllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home").
- Avoid using special characters, emojis, and hyphenated names (@, &, #, /, -, *, +, etc.).
- Avoid using acronyms ("Emergency" vs. "ICE" or "In Case of Emergency") or words with all capital letters.
- Spell words completely; system will not recognize abbreviations ("Doctor Smith" vs. "Dr. Smith").
- Always wait for the beep before speaking any commands.
- When using VR to place a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly.
- Open windows, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with VR accuracy.
- Your VR system may have difficulty understanding some accents or uncommon names.
- Press the talk button and say "Help" to get a list of available commands.

Pairing or Connecting Your Phone with Bluetooth®

- Press the Phone hard key (if equipped) or "Call" button on the steering wheel to begin the pairing process if no phone has previously been paired.
- During the pairing process, please make sure you accept all requests for phonebook download and future auto-connection on your phone.
- To pair a second phone or subsequent phones, reference the manuals and guides supplied with your Rio as steps vary by radio.

- If you experience any issues with auto-connection, try the following:
 - Reboot your phone (turn the phone off and then on).
 - Update the phone operating system to the most recently released version.
 - Delete the phone from the list of Bluetooth® devices on the UVO display¹ and delete UVO from the list of Bluetooth® devices on your phone, and re-pair.
 - Ensure the phone has the Bluetooth® feature activated.
- If some contacts are not downloading to the display, check to confirm that the contact has been entered correctly and that it has been stored under the categories (HOME, MOBILE, WORK, iPhone®³) that are supported by the display. Some contact categories (MAIN, PAGER, OTHER) may not be supported. If the number of contacts exceeds the maximum number allowed on the display, contacts will be partially downloaded. Ensure that only the "phone contact list" is selected for contact download on your phone (not social media or email contact lists as these contacts may not download to the display).
- Phone operating systems change frequently and some phones may have varying compatibility levels with the Bluetooth® system. For any questions regarding the features of your vehicle, please contact your preferred Kia dealer or contact Kia Consumer Assistance at 1-800-333-4542.

Other Bluetooth® Tips

- Bluetooth® reception is affected by carrier coverage and is dependent on the phone.
- If streaming audio through Bluetooth® from a device, ensure the listening volume on the device is turned up.

SMARTPHONE CONNECTIVITY¹



Apple CarPlay³

Your vehicle offers you effortless command of your compatible iPhone® when you connect through Apple CarPlay® on your display. This will enable you to make calls, send hands-free texts, access your favorite music and apps, and get navigation help with Siri® voice control.

To connect Apple CarPlay, visit <https://youtu.be/N1FQ1VqDt4A>.



Android Auto™⁴

Your vehicle allows you to connect to your compatible Android™ phone via Android Auto™ on your display. Through this feature, you can access music, your phone's dialer, navigation help, and more with an intuitive interface and voice commands. You can even access your phone through your steering wheel controls.

 
To connect Android Auto, visit <https://youtu.be/QPV7y06-RJ4>.

FEATURE VIDEOS

To view a video on your mobile device, snap this QR Code or visit the listed website:
<https://www.youtube.com/KiaFeatureVideos>




SATELLITE RADIO RECEPTION

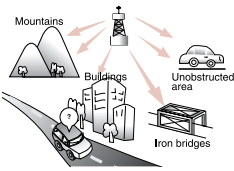

Satellite radio reception requires a direct line of sight with the satellite transmitting the radio signal. Tunnels, bridges, covered parking, mountainous terrain, tall buildings, heavy foliage, and other obstacles may momentarily interrupt the signal. This is normal operation, and reception will be restored within a few seconds in an open, unobstructed area.

The signal can become weak in some areas that are not covered by the satellite repeater network.

 TRUNK / TAILGATE OPERATION*

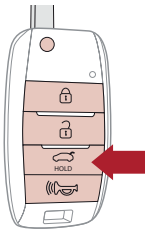


5DR vehicles:

If the tailgate unlock button on the key fob is pressed momentarily when all doors are locked, the tailgate will unlock. While unlocked, the tailgate on the 5DR vehicles can be opened by pressing the Tailgate Release button under the handle and pulling the tailgate up by the handle.

4DR vehicles:

The trunk can only be opened by using the lever inside the vehicle or holding the trunk button on the key fob. If the trunk button on the key fob is pressed for more than 1 second, the trunk will automatically open.

 TILT STEERING WHEEL⁵

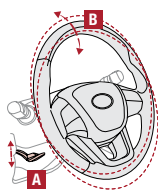


To adjust the Steering Wheel:

- Push down on the Lock-Release Lever **A**.
- Adjust the Steering Wheel to the desired angle **B**.
- Pull up the Lock-Release Lever **A** to lock the Steering Wheel in place.

WIND BUFFETING

In many vehicles, when a rear window is lowered and the front window(s) are in the closed position, air flowing past the open window(s) induces pressure oscillations, or pulsations, which may be uncomfortable. When opening the rear window(s), always remember to also open the front window(s), slightly, to relieve the pressure oscillations inside the vehicle.

 LIGHTING STALK OPERATION

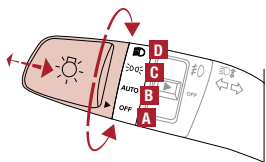

A OFF position

B Auto light position

C Parking light position

 
D Headlight position

The light switch has a Headlight, Auto light and a Parking light position. To operate the lights, turn the knob at the end of the control lever to one of the above positions.

When the light switch is in the parking light position (C), the tail, license and instrument panel lights will turn ON.

FRONT AND REAR WINDSHIELD WIPER / WASHER CONTROLS

FRONT CONTROLS

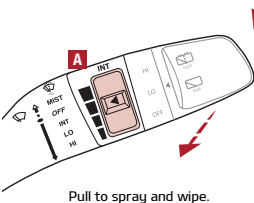

MIST: Single wipe

 
OFF: Wiper off

INT: Intermittent wipe **A**

LO: Slow wipe

HI: Fast wipe

REAR CONTROLS (IF EQUIPPED)

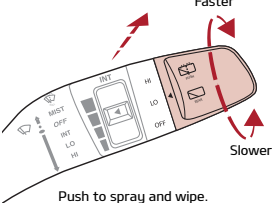



HI: Fast wipe

LO: Slow wipe


OFF: Wiper off

 CHECK ENGINE LIGHT FROM FUEL CAP



Tighten the cap until it clicks one time; otherwise, the Check Engine Light  may illuminate. The Fuel Filler Door Release lever is located on the lower part of the driver's door sill.

 
HEADREST ADJUSTMENTS⁶

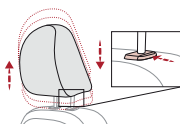

• To raise headrest: Pull headrest up.

• To lower headrest: Press lock, then press the headrest down.

 6-WAY ADJUSTABLE DRIVER'S SEAT⁷

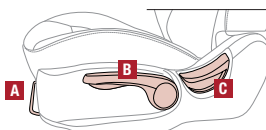


Pull lever **A** to slide seat forward/backward.

Pull/press lever **B** up/down one or more times to adjust seat height.

Pull lever **C** to adjust seat back recline.

Reminder: When adjusting seat forward or backward, ensure seat clicks or locks into place before driving the vehicle.

 WINDSHIELD DEFOGGING



Windshield fogging is caused by moisture in the air condensing on the cold glass. To help reduce window fogging:

- Keep the inside of the glass as clean as possible.
- Utilize the Defrost Mode which activates the A/C and opens the Fresh Air Vent **A**.
- Adjust the Temperature Control to the desired temperature **B**.

CONDENSATION INSIDE EXTERIOR VEHICLE LIGHTS

 
Your vehicle’s exterior lights with clear lenses are vented to the atmosphere to release pressure as the air inside heats and cools. When humid/moist air enters the headlight/tail light, the moisture may condense on the lens surface and appear as fogging or water droplets. This is a normal condition and the moisture will evaporate when the lights are turned ON or when the temperature increases.

USB PORT(S) AND USE OF CABLES

Vehicle may contain USB port(s) for playing music from a compatible media device as well as USB port(s) for charging. Note: devices will only be recharged when the vehicle is in ACC/ON/Start position.

If you encounter difficulty plugging in a compatible USB device, change the orientation of the device (may be upside down). Always use the USB charging cable that has been certified by the device manufacturer. Use of aftermarket cables is NOT recommended as they may impact functionality.


POWER OUTLET

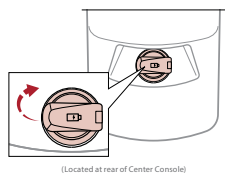

The power outlet is designed to provide power for mobile telephones or other devices designed to operate with vehicle electrical systems. The devices should draw less than 12V, 15A (180W max) with the engine running.


Use a power outlet only when the engine is running and remove the accessory plug after use. Using the accessory plug for prolonged periods of time with the engine off could cause the battery to discharge.

 REMOTE KEYLESS ENTRY (FOLDING KEY)*

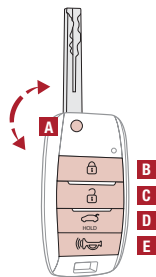

- A** Press the release button to unfold the key.
- B** Press to lock all Doors. If pressed again within 4 seconds, the hazard lights will blink and the horn will sound.
- C** Press to unlock Driver’s Door. Press twice in 4 seconds to unlock all Doors and Trunk/ Tailgate.*
- D** Press for more than 1 second to automatically open Trunk/unlock Tailgate.*
- E** Press and hold for approximately one second for Panic Alarm. To turn OFF Alarm, press any button.

 INSTRUMENT CLUSTER USER SETTINGS*

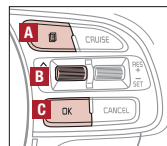

To enter the User Settings mode in the LCD Instrument Cluster modes, press the Mode button **A** when the vehicle is at a standstill and with the ignition ON, and select User Settings .

You can navigate the selections on the display by toggling the Move button **B**. Select the item by pressing the OK (Set/Reset) button **C**.

- User Settings Menu
- Driving Assist:*
 - Forward Collision-Avoidance Assist (FCA)*
 - Forward Collision Warning (FCW)*

- Door:*
- Automatically Lock
 - Automatically Unlock
 - Two Press Unlock*
 - Horn Feed Back*

- Language:
- Choose the language

- Lights:
- One Touch Turn Signal
 - Head Lamp Delay

 
- Convenience:
- Wiper/Light Display*
 - Auto rear wiper (reverse)*
 - Gear Position Pop-up*
 - Icy road warning*

Reset:
Reset menus in User Settings

- Service Interval:
- Enable Service Interval
 - Adjust Interval
 - Reset

- Other Features:
- Fuel Economy Auto Reset
 - Fuel Economy Unit
 - Temperature Unit
 - Tire Pressure Unit*

MANUAL CLIMATE CONTROL

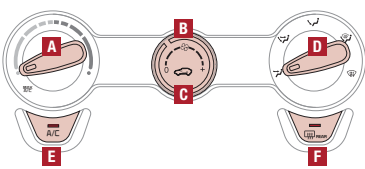


- A** Temperature control
- B** Fan speed control
- C** Recirculated/Fresh Air button
- D** Mode selection control
- E** Air conditioning ON/OFF button
- F** Rear windshield defroster button

- Defrost Outside Windshield:
1. Set Fan Speed to the highest position.
 2. Set Temperature to Hot.
 3. Select Front Defrost mode.

- Defog Inside Windshield:
1. Set Fan Speed to desired position.
 2. Set Temperature to desired position.
 3. Select Front Defrost mode.

Air Flow Modes

 To select Air Flow Modes, press the Mode selection buttons:



HILL-START ASSIST CONTROL (HAC)⁸

 
HAC can help to prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline.

The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

Reminders:

- The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position.
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline.
- In the event of HAC system malfunction, see an authorized Kia dealer for service.

FORWARD COLLISION-AVOIDANCE ASSIST (FCA)*⁸ / FORWARD COLLISION WARNING (FCW)*⁸



The FCA and FCW systems are designed to detect slowing or stopped traffic ahead and, under certain conditions, can apply the brakes in order to help avoid or reduce the effects of a potential collision. Initially, FCW will provide a warning when it detects a potential collision with a vehicle in front, emitting an audible warning and visual alert on the instrument cluster **A**.

 
Adjust the alert settings (Early, Normal, Late) in the User Settings. To turn the FCA/FCW systems off, go to User Settings to turn it off.

If the system detects that the collision risk has increased, FCA automatically applies the brakes to reduce your speed, potentially helping to avoid or reduce the effects of a possible collision. FCA can be turned ON in the User Settings menu on the Instrument Cluster display.

The FCA/FCW systems will become active when the:

- Engine Start/Stop button is ON.
- Vehicle is traveling faster than 5 mph.
- Electronic Stability Control (ESC) is ON.


AUTOMATIC GEAR SHIFT WITH SPORTMATIC® SHIFTING*

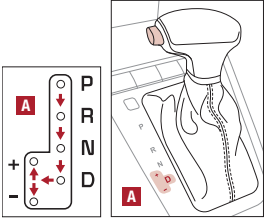

P: Park
R: Reverse
N: Neutral
D: Drive
[+]: Manual Mode Upshift
[-]: Manual Mode Downshift

Manual Mode:
To enter Manual mode, move shift lever from D to left gate **A**.
To shift while in Manual mode, move shift lever up [+] to upshift or down [-] to downshift.

 REAR VIEW MONITOR⁸

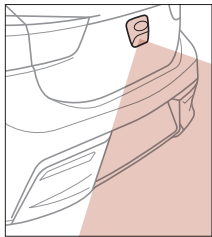


The Rear View Monitor is a supplemental system that displays the view behind the vehicle through the audio control unit screen while the vehicle is in Reverse.

The Rear View Monitor activates when the:

1. Ignition is ON.
2. Gear Shift Lever is in the R (Reverse) position.

Reminder: Always drive carefully and use caution when backing up.

 FOLDING REAR SEATBACK*⁹

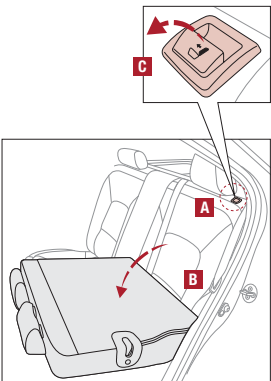

To Fold:

1. Ensure the rear seat belt is out of way of the Seatback folding area **A** (4-door model). Insert the metal seat belt tab into the holder **B** (5-door model).
2. Adjust the Front Seatback to the upright position, and lower the rear headrest to the lowest position.
3. Pull on the Rear Seatback lock release lever **C**, then fold the seat forward.

To Unfold:

1. Pull the lock release lever **C**, and lift the Seatback backward until it clicks firmly in place.
2. Return the rear seat belt to the proper position.

Quick Tips:

- It may be necessary to adjust the front seatbacks to fully lower the rear seats.
- Ensure the seat is locked by pressing down on the Seatback and ensuring the red line is NOT visible on the bottom of the release lever.

GIVE IT EVERYTHING 

2020 Rio 5-Door S with Technology Package shown on cover. Images or graphics are for illustrative purposes only and may not reflect actual feature or operation. See the Owner's Manual for more detailed information, limitations, and conditions. *If equipped. ¹The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle. ²The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kia is under license. A Bluetooth® enabled cell phone is required to use Bluetooth® Wireless Technology. ³Apple CarPlay, iPhone, and Siri are registered trademarks of Apple Inc., registered in the U.S. and other countries. ⁴Android and Android Auto are trademarks of Google LLC. Vehicle user interface is a product of Google and its terms and privacy statements apply. Requires the Android Auto app on Google Play and an Android compatible smartphone running Android™ 5.0 Lollipop or higher. Data plan rates apply. ⁵Do not attempt to adjust the steering wheel while driving as this may cause you to lose control of the vehicle. ⁶Do not adjust the headrest while driving as this may cause you to lose control of the vehicle. ⁷Do not adjust the seating position while driving as this may cause you to lose control of the vehicle. ⁸Driver-assist technologies are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution. ⁹All cargo should be evenly distributed, properly secured, and never piled higher than the seatback.