

## VEHICLE FEATURE TIPS



2019

# CADENZA



## OWNER'S MANUAL, FEATURES AND FUNCTIONS GUIDE

Many of the Tips presented below are covered in greater detail in the Owner's Manual, Multimedia System Manuals, Features and Functions Guide and Quick-Start Guide hangtag supplied with your new vehicle.



## VOICE RECOGNITION<sup>1</sup> AND BLUETOOTH<sup>2</sup>

### Using Voice Recognition

Improve Bluetooth<sup>2</sup> Voice Recognition (VR) performance by making a few simple changes to your phone contacts:

- Use full names (first and last names) vs. short or single syllable names (“John Smith” vs. “Dad,” “Smith Residence” vs. “Home”).
- Avoid using special characters, emojis, and hyphenated names (@, &, #, /, -, \*, +, etc.).
- Avoid using acronyms (“Emergency” vs. “ICE” or “In Case of Emergency”) or words with all capital letters.
- Spell words completely; system will not recognize abbreviations (“Doctor Smith” vs. “Dr. Smith”).
- Always wait for the beep before speaking any commands.
- When using VR to place a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too soft or too loud.
- Open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with VR accuracy.
- Your VR system may have difficulty understanding some accents or uncommon names.
- Press the talk button and say “Help” to get a list of available commands.

### Pairing or Connecting Your Phone with Bluetooth<sup>2</sup>

- During the pairing process, please make sure you accept all requests for phonebook download and future auto-connection on your phone.
- To pair a second phone or subsequent phones, reference the manuals and guides supplied with your Cadenza as steps vary by radio.

- If you experience any issues with auto-connection, try the following:
  - Reboot your phone (turn the phone off and then on).
  - Update the phone operating system to the most recently released version.
  - Delete the phone from the UVO display and the UVO display from the phone, and re-pair.
  - Ensure the phone has the Bluetooth<sup>2</sup> feature activated.
- If some contacts are not downloading to the UVO display, check to confirm that the contact has been entered correctly and that it has been stored under the categories (HOME, MOBILE, WORK, iPhone<sup>3</sup>) that are supported by the UVO display. Some contact categories (MAIN, PAGER, OTHER) may not be supported. If the number of contacts exceeds the maximum number allowed on the UVO display, contacts will be partially downloaded. Ensure that only the “phone contact list” is selected for contact download on your phone (not social media or email contact lists as these contacts may not download to the UVO display).
- Phone operating systems change frequently and some phones may have varying compatibility levels with the Bluetooth<sup>2</sup> system. For any questions regarding the features of your vehicle, please contact: your preferred Kia dealer or contact Kia Consumer Assistance at 1-800-333-4542.

### Other Bluetooth<sup>2</sup> Tips

- Bluetooth<sup>2</sup> reception is affected by carrier coverage and is dependent on the phone.
- If streaming audio through Bluetooth<sup>2</sup> from a device, ensure the listening volume on the device is turned up.

## SMARTPHONE CONNECTIVITY<sup>1</sup>



### Apple CarPlay™<sup>3</sup>

Your vehicle offers you effortless command of your compatible iPhone® when you connect through Apple CarPlay™ on your UVO display. This will enable you to make calls, send hands-free texts, access your favorite music and apps, and get navigation help with Siri® voice control. To connect Apple CarPlay, visit <https://youtu.be/N1FQ1VqDt4A>.



### Android Auto™<sup>3</sup>


Your vehicle allows you to connect to your compatible Android™ phone via Android Auto on your UVO display. Through this feature, you can access music, your phone's dialer, navigation help and more with an intuitive interface and voice commands. You can even access your phone through your steering wheel controls. To connect Android Auto, visit <https://youtu.be/QPV7y06-RJ4>.

## QR CODE

To view a video on your mobile device, snap this QR Code or visit the listed website.  
<https://www.youtube.com/KiaFeatureVideos>



## SATELLITE RADIO RECEPTION

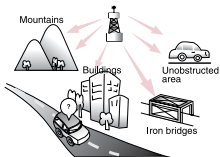


Satellite radio reception requires direct line of sight with the satellite transmitting the radio signal. Tunnels, bridges, covered parking, mountainous terrain, tall buildings, heavy foliage, and other obstacles may momentarily interrupt the signal. This is normal operation, and reception will be restored within a few seconds in an open, unobstructed area.

The signal can become weak in some areas that are not covered by the satellite repeater network.

## USB PORTS AND USE OF CABLES

Vehicle may contain USB port(s) for playing music from a compatible media device as well as USB port(s) for charging. Note: Devices will only be recharged when the vehicle is in ACC/ON/Start position. If you encounter difficulty plugging in a USB device, change the orientation of the device (may be upside down). Always use the USB charging cable that has been certified by the phone manufacturer. Use of aftermarket cables is **NOT** recommended as they may affect functionality.

## AUTO HOLD\*

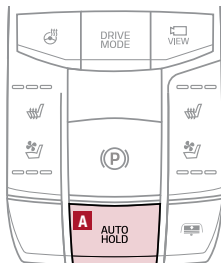

(Buttons located below  
Gear Shift)

Auto Hold temporarily maintains the vehicle at a standstill even if the brake pedal is released. Auto Hold can be turned ON/OFF using the AUTO HOLD switch **A** on the driver's panel. Before Auto Hold will operate, the driver's door, engine hood and trunk must be closed, and the driver's seat belt must be fastened.

The Auto Hold indicator has four states:


**White:** Standby - With vehicle at a standstill, and AUTO HOLD switch **A** turned ON, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

**Green:** Engaged - When coming to a complete stop by depressing the brake pedal, the Auto Hold indicator changes from white to green.

**OFF (not illuminated)** - The indicator will turn OFF when the AUTO HOLD switch **A** is manually turned OFF or when the EPB is manually turned ON.

**Yellow:** Malfunction - When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.


## ACCESSORY MODE WITH SMART KEY

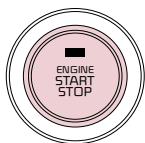

With standard key vehicles, you can turn the key to the accessory mode and utilize the electronic accessories without starting the vehicle. This is still possible with Smart Key equipped vehicles. To do this, enter the vehicle with the Smart Key and push the ENGINE START/STOP button one time without depressing the brake pedal. This will put the vehicle in Accessory mode and ACC will illuminate in amber.

If the ENGINE START/STOP button is in the ACC position for more than 1 hour, the button is turned off automatically to help prevent battery discharge.

## SMART TRUNK/SMART POWER TRUNK OPERATION\*

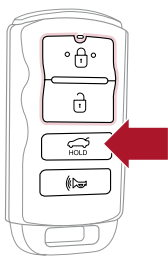


To open the Smart Power Trunk\*, press and hold the Smart Key Trunk button until the trunk begins opening. To close, push the button on rear deck lid, or push and hold the button on the dash panel, to the left of the steering wheel.

When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Power Trunk\* is about to open. Then the alert system will blink and chime two additional times before opening the Smart Power Trunk\*.

The Smart Trunk\* feature is OFF by default. To enable the Smart Trunk\*, go to User Settings in the LCD Instrument Cluster modes.

Note: Valet switch in the glove compartment must be "off-unlocked" for this feature to work.

## FRONT SEAT HEADREST ADJUSTMENT




To raise headrest: Pull headrest up.

To lower headrest: Press lock **A**, then press the headrest down.

REMINDER: Do not adjust the headrest while driving as this may cause you to lose control of the vehicle.

## HEAD-UP DISPLAY (HUD)\*

The Head-Up Display (HUD) is a transparent display that projects a snippet of information from the instrument cluster and navigation system onto the windshield glass. Drivers can turn the HUD display on or off in User Settings.



### The HUD displays:

- Turn By Turn (TBT) navigation information<sup>4</sup>
- Road signs\*
- Speedometer
- Cruise setting speed
- Advanced Smart Cruise Control (ASCC) information\*
- Blind-Spot Collision Warning (BCW) information\*
- Warning lights (low fuel, BCW)
- AV Mode information

### Head-Up Display (HUD) Display Settings

Drivers can adjust the HUD settings from the LCD

Instrument Cluster modes in User Settings. HUD settings include:


- Display Height: Adjust the height of the HUD image on the windshield glass
- Rotation: Adjust the degree of HUD rotation
- Brightness: Adjust the intensity of the HUD brightness
- Contents Select: Activate or deactivate HUD content (TBT<sup>4</sup>, ASCC, LKA, BCW)
- Speedometer Size: Choose the size of the HUD speedometer (Small, Medium, Large)
- Speedometer Color: Choose the color of the HUD speedometer (White, Amber, Green)

Warning: Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

## WIND BUFFETING


In many vehicles, when a rear window is lowered and the front window(s) are in the closed position, air flowing past the open window(s) induces pressure oscillations, or pulsations, which may be uncomfortable. When opening the rear window(s), always remember to also open the front window(s), slightly, to relieve the pressure oscillations inside the vehicle.

## LANE KEEPING ASSIST (LKA)\*<sup>5</sup>




(Button panel located left of Steering Wheel)

If the LKA\*<sup>5</sup> detects that you are moving outside of your lane, the system may give an audible warning and display a Lane Departure Warning\*<sup>5</sup> alert on the instrument cluster.


With the Engine Start/Stop button in the ON position, press the LKA\*<sup>5</sup> button  to turn the system ON. The LKA\*<sup>5</sup> icon in the instrument cluster will illuminate white. To cancel, press the button again.

When the vehicle exceeds approximately 37 mph and the LKA\*<sup>5</sup> system recognizes the lane the vehicle is traveling in, the lane indicators will both be solid white. If the vehicle continues to move outside of the lane, the LKA\*<sup>5</sup> will apply a slight adjustment to the steering, trying to prevent the vehicle from moving outside its lane.

## CHECK ENGINE LIGHT FROM FUEL CAP



(Buttons located left of Steering Wheel)

Tighten the cap until it clicks one time, otherwise the Check Engine Light  may illuminate. The Fuel Filler Door Release button is located on the driver's side lower dash next to the trunk release.

## DRIVE MODE INTEGRATED CONTROL SYSTEM\*



(Button located below Gear Shift)

The Drive Mode Integrated Control System\* and the SMART Mode automatically select the optimum driving mode among COMFORT, ECO, SPORT and SMART modes by detecting and learning the driver's driving style, such as the use of the accelerator pedal and the steering wheel, in real time. To cycle through the different Drive Modes **A**, press the DRIVE MODE button **B**. The Instrument Cluster will display the current mode selected **C**.

## FORWARD COLLISION-AVOIDANCE ASSIST (FCA)<sup>5</sup> / FORWARD COLLISION WARNING SYSTEM (FCW)<sup>5</sup>\*




The FCA<sup>5</sup> is designed to apply the brakes in certain situations to help prevent or lessen the effects of a frontal collision. The FCA<sup>5</sup> will become active when the vehicle is traveling more than 5 mph. To turn off the FCA<sup>5</sup> go to User Settings in the LCD Instrument Cluster modes. The FCA<sup>5</sup> will be activated by default when vehicle power is cycled on, even when it's been previously set to off.

The FCW<sup>5</sup> uses the front-mounted radar to detect a potential collision with the car in front and, in certain conditions, provides the driver audible warnings and visual signals on the meter display.

Warning: Forward Collision-Avoidance Assist<sup>5</sup> and Forward Collision Warning System<sup>5</sup> are not substitutes for safe driving, and may not detect all objects surrounding the vehicle. Always drive safely and use caution. The FCW<sup>5</sup> will not operate when the vehicle is traveling more than approximately 50 mph.

## PARKING DISTANCE WARNING-REVERSE (PDW-R)<sup>5</sup>

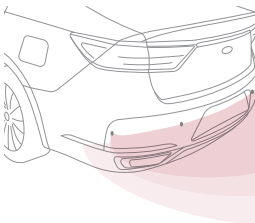


The PDW-R<sup>5</sup> is a supplemental system that assists the driver by chiming if any object is detected within the sensing area to the rear and side of the vehicle when backing up. When the ignition is ON and the vehicle is in Reverse, the system is activated.

When the ignition is ON, the system is activated. If the vehicle is moving at speeds over 3 mph, the system may not activate correctly.

When more than two objects are sensed at the same time, the closest one will be recognized first.

The PDW-R<sup>5</sup> is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The PDW-R<sup>5</sup> may not detect every object behind the vehicle.


## WINDSHIELD DEFOGGING



Windshield fogging is caused by moisture in the air condensing on the cold glass. The following practices can help reduce window fogging:

- Keeping the inside of the glass as clean as possible.
- Utilizing the Defrost Mode **A**, which activates the A/C and opens Fresh Air Vent.
- Adjusting the Temperature Control **B** to the desired temperature.

## WIRELESS SMARTPHONE CHARGING SYSTEM\*

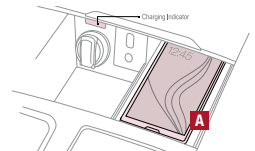

Charge a compatible mobile phone wirelessly by placing it on the tray **A** at the front of the console, near the USB/Aux ports and the charging indicator, while the ignition is on. For best results, place smartphone on the center of the charging pad. If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber. Avoid placing other metal items in the bin while charging as to not impede the charging area.

## CONDENSATION INSIDE EXTERIOR VEHICLE LIGHTS

Your vehicle's exterior lights with clear lenses are vented to the atmosphere to release pressure as the air inside heats and cools. When humid/moist air enters the headlight/tail light, the moisture may condense on the lens surface and appear as fogging or water droplets. This is a normal condition and the moisture will evaporate when the lights are turned ON or when the temperature increases.


## SEAT WARMERS<sup>6</sup> / VENTILATED SEATS\*



- Press bottom (ventilate) / top (warm) button once for high setting (3 LEDs lit).
- Press button twice for medium setting (2 LEDs lit).
- Press a third time for low setting (1 LED lit) and again to turn OFF.

With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature.


## DRIVER POSITION MEMORY SYSTEM\*<sup>7</sup>

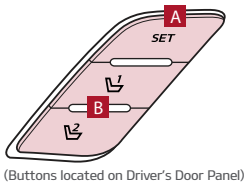

To store a seating position into memory, first place the shifter into P (Park) while the ignition switch is ON. Then:

1. Adjust the driver's seat and outside rearview mirror.
  2. Press the SET button **A** on the control panel. The system will beep once.
  3. Press one of the memory buttons ("1" or "2") **B** within 5 seconds. The system will beep twice when memory has been stored.
  4. "Driver (1 or 2) set is memorized" will appear on the instrument cluster LCD display.
- NOTE: Position of leg extension can not be memorized.

## BLIND-SPOT COLLISION WARNING (BCW)\*<sup>5</sup> / REAR CROSS-TRAFFIC COLLISION WARNING (RCCW)<sup>5</sup>

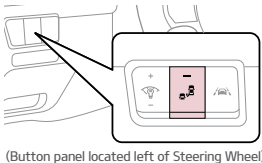


The BCW<sup>5</sup> and the RCCW<sup>5</sup> use radar sensors to detect vehicles in blind spots and alert the driver while changing lanes or while backing up.

When the BCW<sup>5</sup> button is pressed ON, the BCW<sup>5</sup> indicator on the button will illuminate. The outside rearview mirror warning lights will also illuminate for 3 seconds.

The system will become active when the vehicle is traveling more than 18 mph and will alert the driver if another vehicle is detected by the radar sensors.

## WINDSHIELD WIPER SERVICING POSITION

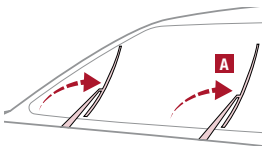

To inspect or replace the windshield wiper blades and prevent damaging the hood, the blades need to be moved to the service position **A**.

With the ignition ON, turn the ignition OFF and, within 3 seconds, move the wiper switch to the MIST position and hold the switch for more than 2 seconds until the wiper blade is in the fully up position.

To return wipers to normal position, turn the ignition ON, then activate MIST.



Images or graphics for illustration only. \*If equipped. (1) The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle. (2) The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kia is under license. A Bluetooth® enabled cell phone is required to use Bluetooth® Wireless Technology. (3) Apple CarPlay, iPhone and Siri are registered trademarks of Apple Inc. Android and Android Auto are trademarks of Google LLC. Apps may run on your smartphone cellular data service and normal data rates will apply. Requires a compatible device sold separately. (4) If Turn By Turn (TBT) navigation information is selected as HUD content, TBT information will not be displayed on the LCD. (5) These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution. (6) Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more safety information. (7) Do not adjust the seating position while driving as this may cause you to lose control of the vehicle.